

EN



ITP16

Temperature indicator

User guide



ITP16_2018.05_0280_EN
© All rights reserved
Subject to technical changes and misprints

GOGATEC GmbH
A-1210 Wien, Petritschgasse 20
Tel.: +43 1 258 3 257-0 Fax - 17
info@gogatec.com www.gogatec.com

technische Änderungen vorbehalten



Contents

1	Overview	2
2	Specifications	2
2.1	Galvanic isolation	3
2.2	Environmental conditions	3
3	Intended use	4
4	Functions	4
5	Installation	4
5.1	Wiring	4
5.1.1	Input	5
5.1.2	Output	6
6	Operation	6
6.1	Control	6
6.2	Alarm	7
6.3	Filter	7
6.4	Square root function	8
6.5	Error	8
7	Programming	8
8	Maintenance	10
9	Transportation and storage	11
10	Scope of delivery	11
Appendix A.	Dimensions	11

1 Overview

ITP16 is a universally applicable process indicator and can be used with various input signals: RTD, TC, linear voltage signal. The device requires 24V DC auxiliary voltage. It is designed for control and monitoring of industrial processes.

2 Specifications

ITP14 can be ordered in two versions. They differ in the display color. Ordering key:

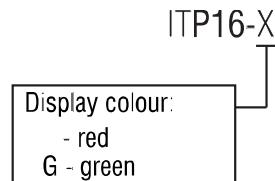


Table 2.1 Technical data

Power supply	24 (10...30) V DC
Power consumption, max.	1 W
Input	1
Input signal	See Table 2.2
Sampling time, max.	2 s
Accuracy	± 0.25% FS
Temperature influence	≤ 0.2% / 10 °C
Input resistance	
0-1 V, -50...+50mV	≥ 250 kohm
Output	1
Type	NPN transistor
Loading capacity	200 mA, 42 V DC
Enclosure	for panel mounting
Character height	14 mm
Dimensions	48 x 26 x 65 mm
Weight	approx. 30 g

Table 2.2 Input signal

Display	Signal type	Measurement range, °C	Temperature coefficient, °C ⁻¹
RTD according to IEC 60751:2008			
P50	Pt50	-200...+850	0.00385
P100	Pt100	-200...+850	0.00385
P500	Pt500	-200...+850	0.00385
P1E3	Pt1000	-200...+850	0.00385
RTD according to GOST 6651			
c50	Cu50	-50 ...+200	0.00426
c50	50M	-180 ...+200	0.00428
P50	50P	-200...+850	0.00391
c100	Cu100	-50 ...+200	0.00426
c100	100M	-180 ...+200	0.00428
P100	100P	-200...+850	0.00391
n100	Ni100	-60...+180	0.00617
c500	Cu500	-50 ...+200	0.00426
c500	500M	-180 ...+200	0.00428
P500	500P	-200...+850	0.00391
n500	Ni500	-60...+180	0.00617
c1E3	Cu1000	-50...+200	0.00426

Display	Signal type	Measurement range, °C	Temperature coefficient, °C⁻¹
c. IEC	1000M	-180...+200	0.00428
P. IEC	1000P	-200...+850	0.00391
n. IEC	Ni1000	-60...+180	0.00617
TC according to IEC 60584-1:2013			
tP.R	K	-200...+1300	
tP.J	J	-200...+1200	
tP.N	N	-200...+1300	
tP.T	T	-250...+400	
tP.S	S	-50...+1750	
tP.R	R	-50...+1750	
tP.B	B	+200...+1800	
tP.R1	A	0...+2500	
TC according to GOST 8.585			
tP.L	L	-200...+800	
tP.R2	A-2	0...+1800	
tP.R3	A-3	0...+1800	
TC according to DIN 43710			
tP.TL	L	-200...+900	
Linear signals			
50.50	-50...50 mV	0...100 %	
0-1	0-1 V	0...100 %	
Reserved			
PP1S	not used	-	-
PP20			
PC20			

2.1 Galvanic isolation

The ITP16 has three potential groups:

- Power supply 24 V DC
- Analog input
- Digital output

Galvanic isolation from each group to enclosure 500 V

Galvanic isolation between groups 500 V

2.2 Environmental conditions

The device is designed for natural convection cooling. It should be taken into account when choosing the installation site.

The following environment conditions must be observed:

- clean, dry and controlled environment, low dust level
- closed non-hazardous areas, free of corrosive or flammable gases

Table 2.3

Conditions	Permissible range
Ambient temperature	-40...+60 °C
Storage temperature	-25...+55 °C
IP Code	front IP65, rear IP20
Protection class	III
Relative humidity	up to 80% (at +35°C, non-condensing)

3 Intended use

The device may only be used in the manner described in this user guide, properly installed and in accordance with the specification. Damages caused by disregarding the instructions of this manual are without liability. Non-observance of the safety guidelines may result in damage to the device and injury to personal.

Improper use

Any other use is considered improper. Especially to note:

- The ITP16 may not be used for medical devices that sustain, monitor or otherwise affect human life or health.
- The device may not be used if the environmental conditions (temperature, humidity etc.) are not within the limits indicated in the specification.
- The device may not be used in potentially explosive environment or in an atmosphere with chemically active substances.

4 Functions

A 4-digit LED display with 14 mm character height is located on the front of the device to display the process value or error messages in operation (see 6) and programming parameters in programming mode (see 7). The function buttons are positioned on the rear part of the device.

Main functions:

- Analog input signals according to Table 2.2
- Measuring and displaying of a process value
- Linear voltage signal scaling
- Adjustable decimal point position
- Display range -999...9999
- Square root function (for special transmitters)
- Digital filter
- Alarm function
- Error indication when the input signal is out of range
- Error indication when wire break or short circuit

5 Installation



***Improper installation can cause serious or minor injuries and damage the device.
Installation must be performed only by fully qualified personnel.***

The device is designed for panel mounting in a borehole of Ø22.5 mm (see Appendix A for dimensional drawings).

Carefully position the supplied gasket on the display rear surface. Insert the cylindrical body of the device into the borehole and tighten the nut from the rear side of the panel.

5.1 Wiring



Switch on the power supply only after the wiring of the device has been completely performed



***Switch off the device before checking the sensor and connection lines.
For circuit integrity check use only the measuring device with the output voltage max.
4.5 V to prevent the device damage. Disconnect the sensor in case of higher voltage.***



***Signal cables should be routed separately or screened from the supply cables.
Only a shielded cable may be used for signal lines.***

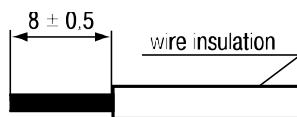


Fig. 5.1 Wire preparation

Do not use wire end ferrules to connect stranded wires.

To connect fine-stranded wire, tin the wire end.

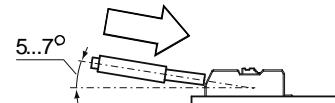


Fig. 5.2 Connecting the wire to the terminal

To connect solid wire, push the wire into the terminal.

To connect stranded wire, press the release lever and push the wire into the terminal.

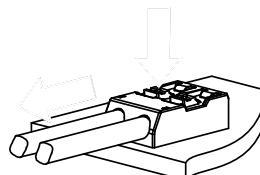


Fig. 5.3 Disconnecting the wire

Press the release lever to free the wire.

Fig. 5.4 Mounting

- The electrical connections are shown in Fig. 5.5-5.8, the terminal assignments in Table 5.1.
- Ensure that the device is provided with its own power supply line and electric fuse $I = 0.5$ A.
- Solid conductor cross-section: $0.2 \dots 0.8 \text{ mm}^2$. Stranded conductor cross-section: $0.45 \dots 0.7 \text{ mm}^2$. Wires should be stripped for approx. 8 mm.

5.1.1 Input

Fig. 5.5 RTD sensor wiring

Fig. 5.6 TC sensor wiring

AI-1

AI-2

AI-3

Fig. 5.7 Voltage signal wiring

Table 5.1 Terminal assignment

Designation	Description
24VDC -	Power supply
24VDC +	
DO-	Output -
DO+	Output +
AI1	+ (three-wire RTD)
AI2	+
AI3	-

Table 5.2 Sensor cables

Sensor type	Cable length, max.	Resistance (each wire), max.	Requirement
RTD	100 m	30 ohm	Equal length and cross-section for 3-wire
TC	20 m	100 ohm	Thermocouple cable

5.1.2 Output

The NPN transistor output is designed to control the low voltage relay up to 42 V DC / 200 mA

► NOTICE

As a precaution against inadvertent current reversal on output, a parallel diode ($U_{VD} \geq 1.3U$, $I_{VD} \geq 1.3I$) is usually included in the output circuit.

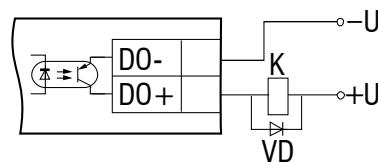


Fig. 5.8 NPN transistor output

6 Operation

After the device is powered on the operating mode is activated. In this mode the measured signal is scaled and displayed. The signal type must be selected in the parameter in.t "Input signal". The complete list of the programming parameters is shown in Table 7.2.

The input signal is digitalised, the square root calculated (if the function is enabled), the signal scaled and displayed. The scale factor is calculated based on the parameters **di.Lo** "Lower measuring limit" and **di.Hi** "Upper measuring limit". The display decimal point can be specified in the parameter **di.P**. For other signal processing functions see 6.2 and 6.3. For displayed errors see Table 6.1.

6.1 Control

ON/OFF control is implemented with the NPN transistor output (see 5.1.2). The parameters **SP.Lo** "Lower setpoint limit" and **SP.Hi** "Upper setpoint limit" specify the control limits. The control function can be selected in the parameter **Cnt**:

- Heating
- Cooling
- Alarm within limits
- Alarm outside limits

The safe output state can be selected in the parameter **out.E**.

Note:

Switching hysteresis: $0.05 \times (\text{SP.Hi} - \text{SP.Lo})$.

6.2 Alarm

If the control function **Cnt** is set and the alarm function **d.FnC = ON**, the display blinks with a frequency of about 2 Hz when the output is switched on (see Fig. 6.1).

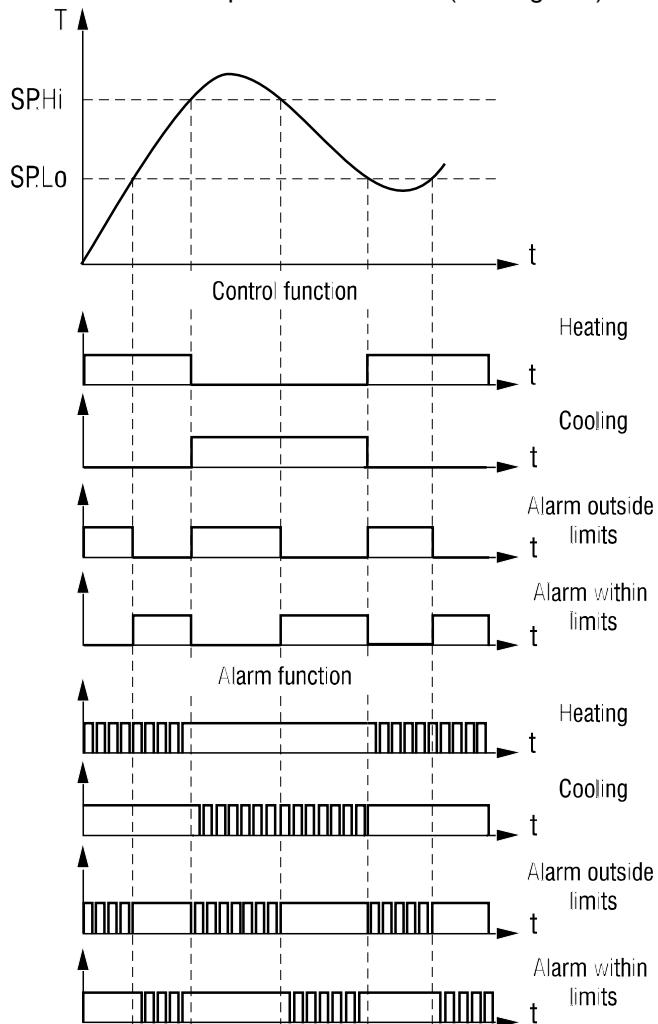


Fig. 6.1

6.3 Filter

Undesirable signal fluctuations can be suppressed through the adjustable filter in the parameter **td** "Filter time constant" (see Fig. 6.2 and Table 7.2).

The filter time constant can be set within the range 0...10 seconds. The higher the value, the slower the display reaction to changes of the input signal and the lower the susceptibility to interference is. The filter is deactivated if **td = 0**.

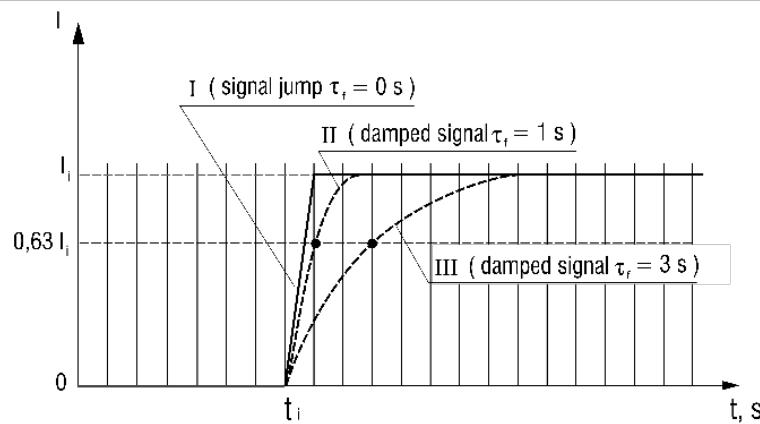


Fig. 6.2 Filter time constant

6.4 Square root function

The function is intended for transmitters with the square characteristic. To enable the function set the parameter **Sqrt** = ON.

6.5 Error

Table 6.1 Displayed errors

Display	Possible cause	Remedy
<i>Er. 1</i>	Measured value error	Check the input signal. Check the sensor and connection lines. Contact the Technical Support of akYtec GmbH.
<i>LLLL</i>	Measured value is below the lower limit for the selected signal (see Table 2.2)	Check the input signal
<i>HHHH</i>	Measured value is above the upper limit for the selected signal (see Table 2.2)	Check the input signal
<i>---- </i>	Sensor break or short circuit	Check the signal line
<i>Er.EJ</i>	CJC sensor error	Contact the Technical Support of akYtec GmbH.

7 Programming

Table 7.1 Function buttons

Key	Description
PROG	Press > 3 s: – enter the programming mode – exit the programming mode Press < 1 s: – save the parameter
PROG + 	Press > 3 s: – enter the service menu
	Increase value or menu navigation
	Decrease value or menu navigation

- Press and hold the button or to activate the ramp function while changing parameter.

- if no button was pressed within 20 s, the device returns to the operating mode automatically.

Table 7.2 Programming parameters

Name	Display	Parameter	Valid value	Description	Default
SP.Lo	SP.<i>Lo</i>	Setpoint lower limit	-999...9999	affected by di.P	0
SP.Hi	SP.<i>Hi</i>	Setpoint upper limit	-999...9999	affected by di.P	30
Cnt	Cn<i>t</i>	Control function	oFF	OFF	U
			Heat	Heating	
			CooL	Cooling	
			U	Alarm outside limits	
			Π	Alarm within limits	
in.t	In<i>t</i>	Input signal	See Table 2.2		Pt100
td	t<i>d</i>	Filter time constant	0...10 s		0
out.E	out.<i>E</i>	Output safe state	ON		OFF
			OFF		
di.Lo	di.<i>Lo</i>	Signal lower limit*	-999...9999	affected by di.P	0
di.Hi	di.<i>Hi</i>	Signal upper limit*	-999...9999	affected by di.P	100
SQrt	Sq<i>r</i>t	Square root function	ON		OFF
			OFF		
di.P	di.<i>P</i>	Decimal point	----	0000	----
			---.-	000.0	
			--.--	00.00	
			.---	0.000	
2u3u	2u3u	RTD connection	3-Ln	3-wire	3-Ln
			2-Ln	2-wire	
d.FnC	d.Fn<i>C</i>	Alarm function	ON		OFF
			OFF		

* only for linear signals

Table 7.3 Service menu

Display	Comments	Valid values	
rES	Restore factory settings	0	User settings
		1	Factory settings
CLbr	Service function	-	
t.C	Service function	-	
SLJ	Service function	-	
SoFt	Firmware version	-	

Note:

1. The minus sign is displayed in the most significant digit, together with 1. The display range is -199.9...999.9 if **di.P** = ---.-,
2. When setting the signal limits, take into account that in some cases the correct value cannot be displayed though there is no error indication.

Example 1:

di.Lo: -999 -> 4 mA **di.Hi:** 9999 -> 20 mA

For the input current of 3.8 mA the correct indication should be "-1068". Actually "1068" will be displayed.

